


gMax 2 Pro

Wiring Diagram

Biqu SKR v2

TFT35 V3

v210722

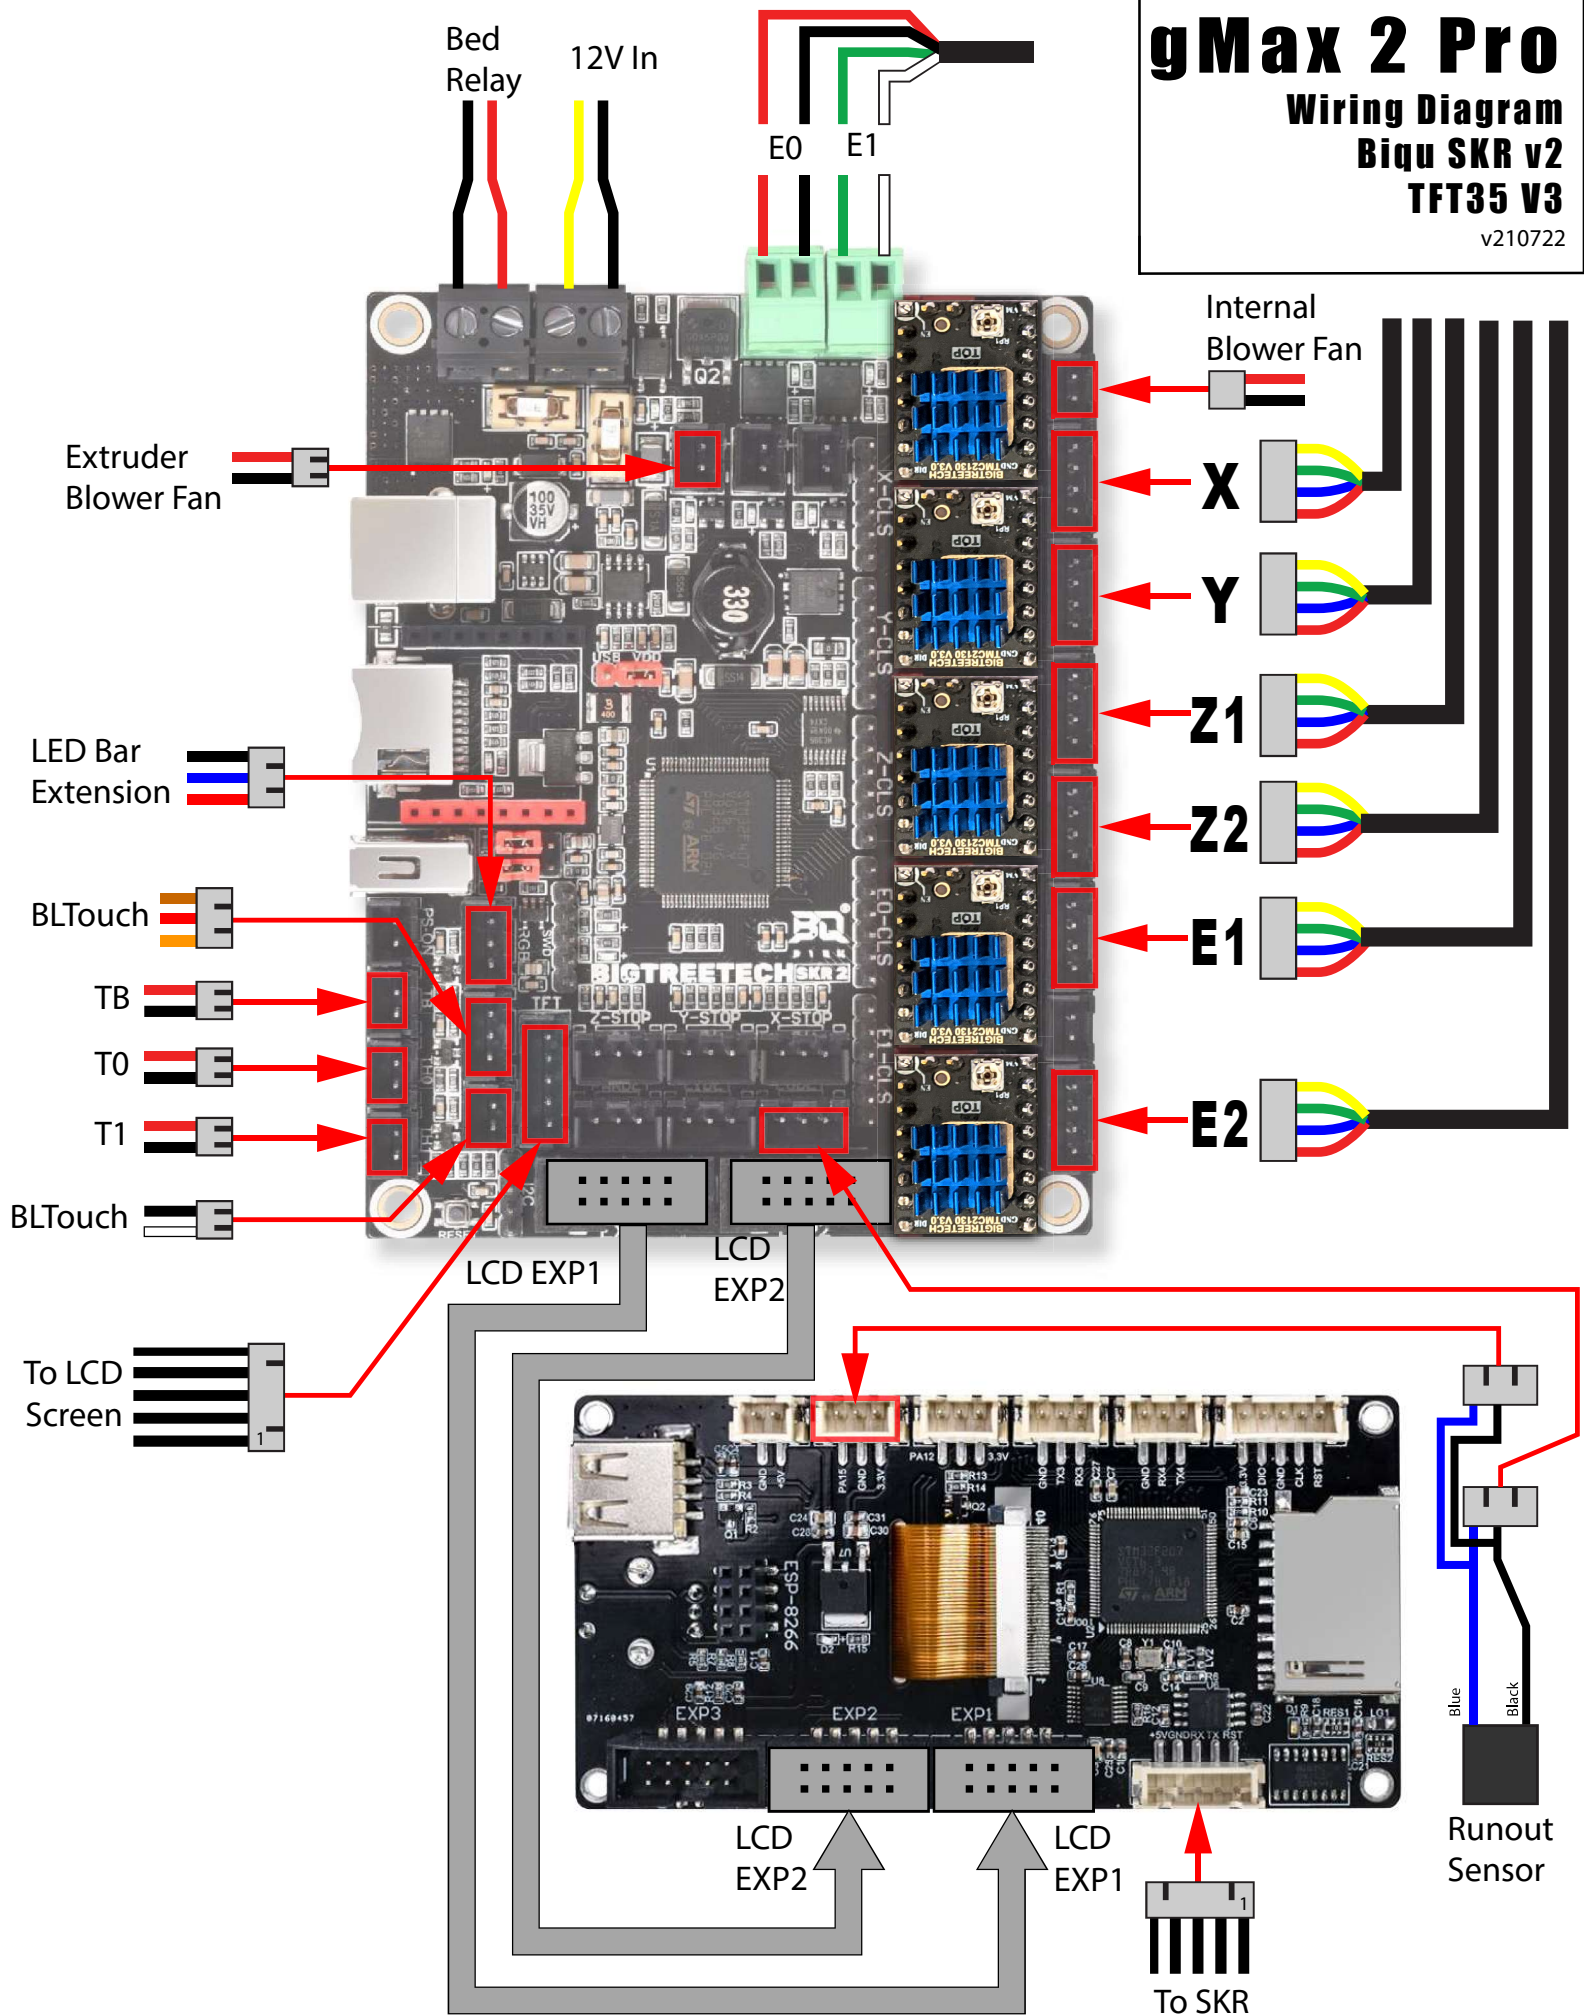

Electronics Case Connector Board PCB

Inside electronics case

gMax 2 Pro


Wiring Diagram

Biqu SKR v2


TFT35 V3

v210722

Inside Case

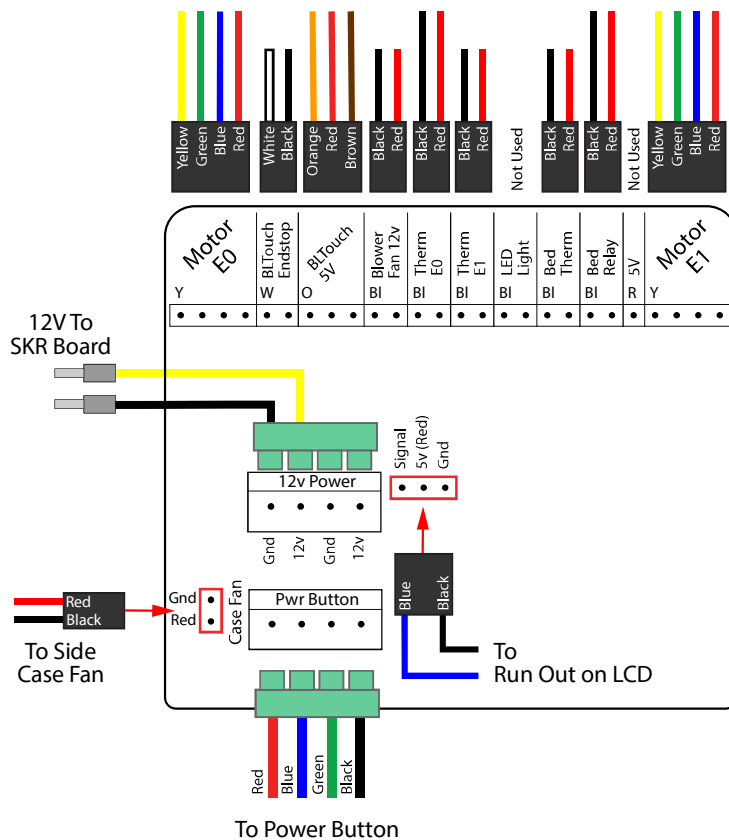


Outside Case

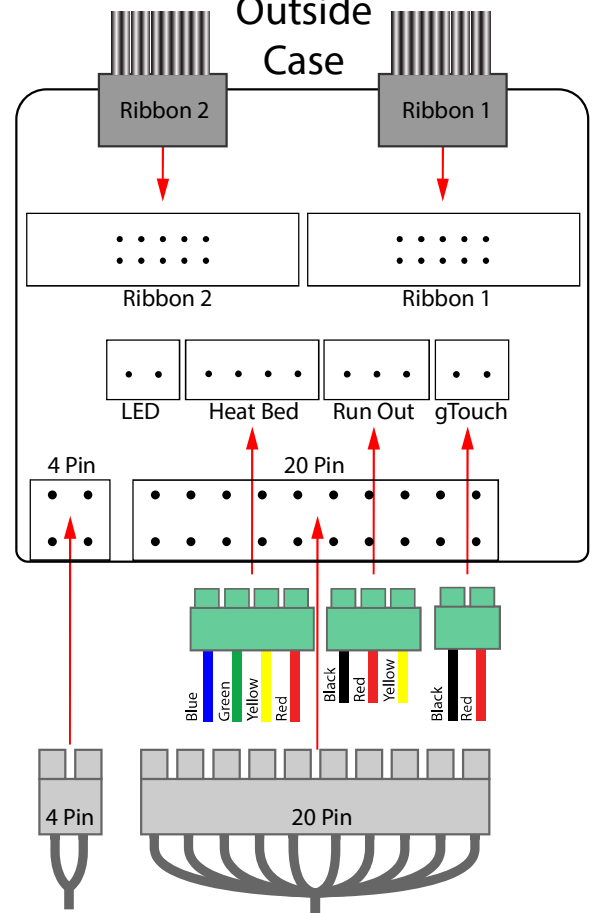

Extruder Board

Inside extruder

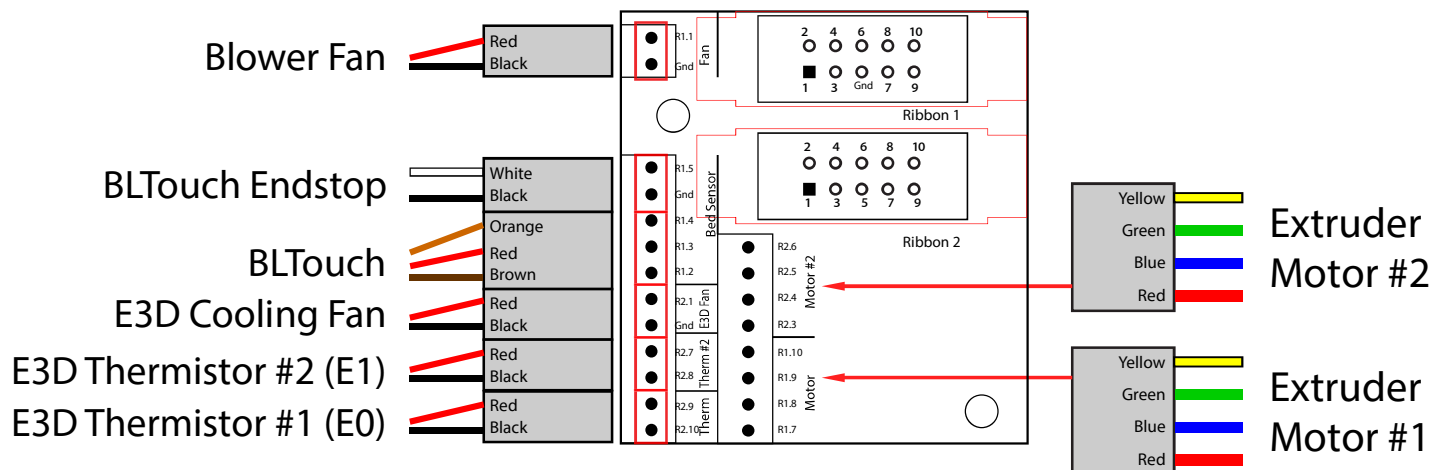

gMax 2 Pro

Wiring Diagram


 
Biqu SKR v2

TFT35 V3

v210722

Adjustable Potentiometer
(Current to Motors)
Clockwise to increase
Counterclockwise to decrease

Note:
Flat spot on
potentiometer should
be at about 45 degrees
when viewed from the
top

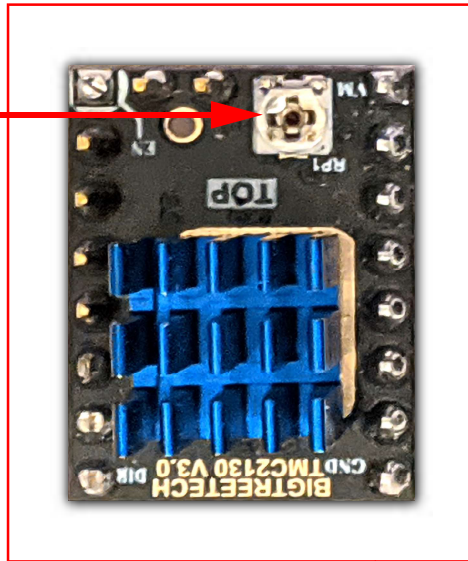

USB 5v Power Mode
(For testing)

USB Port

Micro SD
(Firmware)

Reset Button

